

McGREGOR®

NEW YORK 1921



INSTRUCTION MANUAL 3-IN-1 FACIAL HAIR TRIMMER

English - Norwegian

EN IMPORTANT SAFETY CAUTIONS

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury, or fire. Arovo cannot be held responsible for any injury or property damage cause by failure to comply with the safety cautions and regulations. It is important to read all these instructions carefully before using the product, and to save them for future reference or new users.

EXPLANATION SYMBOLS



Read operators manual.



Declaration of Conformity. Products marked with this symbol comply with all applicable community regulations of the European Economic Area. The EU Declaration of Conformity can be requested from the manufacturer.



The packaging can be reused or recycled. Please dispose properly of any packaging material no longer required.



If you notice any transport damage when unpacking the product, please contact your dealer without delay.

TECHNICAL DATA

- 1x AA battery (not included)
- 1.5V DC

WARNINGS

- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- This appliance can be used by children aged from 8 years and above and persons which reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and use maintenance shall not be made by children without supervision.
- Do not keep and use the appliance in humid areas.
- Keep out of reach of children.
- Do not operate the appliance in the presence of explosive and/or flammable fumes and/or liquids.
- Do not attempt to repair or disassemble the appliance.
- Never operate this appliance if it is not working properly, or if it has been dropped into water.
- Do not use attachments not recommended by the manufacturer.
- Do not use the trimmer for purposes other than styling human hair. This trimmer is designed to shorten and trim hair and beards. Do not use the trimmer to cut artificial hair.
- Cleaning and user maintenance must not be carried out by children without supervision.
- For your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Please keep these instructions for future reference. Contact manufacturer for instructions in an alternative format.
- Incorrect handling of the batteries can lead to an explosion or to acid burns.
- Never attempt to recharge non-rechargeable batteries.
- Avoid contact of the fluid in the battery with skin, eyes and mucous membranes.
- In the event of contact with battery acid, immediately rinse the areas with plenty of clean water and immediately consult a doctor if an unexpected reaction occurs.

- DO NOT replace or disassemble the batteries
- Keep batteries away from children.
- Do not mix with new and used batteries, or different types.
- Rechargeable batteries are to be removed from the appliance before being charged.
- Exhausted batteries are to be removed from the appliance and safely disposed of.
- If the appliance is to be stored unused for a long period, the batteries should be removed.
- The supply terminals are not to be short-circuited.

CLEANING AND MAINTENANCE

- Turn off your trimmer and wait until it is completely cool. Before cleaning, remove the accessory and the used blade and clean with the aid of the cleaning brush that was fitted in the product.
- Clean your trimmer using a damp cloth and then dry it.

GENERAL FEATURES

Please read these instructions carefully before using this product and keep them in a safe place for future reference

1. Nose trimmer head
2. Precision trimmer head
3. Side burn trimmer head
4. Cleaning brush
5. Comb
6. Base stand
7. On/Off switch
8. Opening for battery

ACCESSORIES

Nose trimmer head, precision trimmer head, side burn trimmer head, cleaning brush, comb, base stand

IN THE BOX

- Facial hair trimmer
- User manual. Read these instructions before use.

USE

What to do before first use:

- Remove the packaging material and inspect the device for damage.
- Do not operate the device if it is damaged in any way. Return it to your seller immediately.
- Remove the cap. (Image 1)
- Install battery: Grab the upper section of the unit with one hand the bottom half with the other and pull apart. (Image 2)
- Slide/snap the unit's bottom casing back into place. (Image 3)






INTENDED USE

- Warning! Only use the device externally.
- The appliance is only intended for human hair.
- Any incorrect use can be dangerous!
- To remove an attachment, hold the trimmer with one hand and gently turn the attachment to the right with your other hand. You can easily turn on another attachment.
- The hair must be clean and dry when being cut.
- Only cut small amounts at one time.
- Let the appliance run for a short time before starting to cut.

INSTALLING / CHANGING BATTERY

- Remove the cap. (Image 1)
- Grab the upper section of the unit with one hand, the bottom half with the other, and pull apart (Image 2) to reveal the battery chamber.
- Place 1 AA battery into the compartment, making sure the positive pole (+) is facing the bottom of the unit.
- Slide the unit's bottom casing back into place. (Image 3)

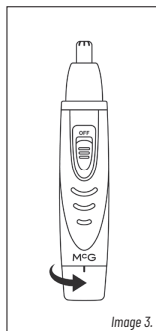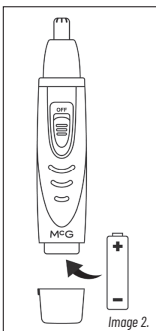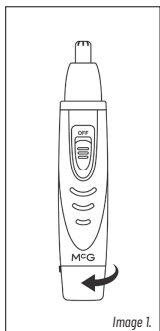

USING THE APPLIANCE

- Attach the accessory which is to be used in the appliance.
- Select the accessory depending on your needs.
- Attach the accessory to your hair trimmer.
- Turn on the appliance. To turn on the appliance. Hold the appliance in your palm with an angle perpendicular to the plane of the skin (90°). There is no need to apply much pressure on the appliance.
- Just let the appliance touch the surface of your skin gently.
- Move the appliance closer to the area to be trimmed and move the appliance up and down gently to trim the hairs.

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



Please remove the battery before disposing of the device/ unit. Do not dispose of old batteries with your household waste, but at a battery collection station at a recycling site or in a shop. Consult your municipal authority or your dealer for information about disposal.

WARRANTY

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence with a minimum of 36 months starting from the date on which the appliance is sold to the end user.

- The warranty only covers defects in material or workmanship.
- The repairs under warranty may only be carried out by an authorized service center. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.
- The warranty will not apply in cases of:
 1. Normal wear and tear
 2. Incorrect use, e.g., overloading of the appliance, use of non-approved accessories
 3. Use of force, damage caused by external influences
 4. Damage caused by non-observance of the user manual, e.g., connection to an unsuitable main supply or non-compliance with the installation instructions
 5. Partially or completely dismantled appliances
 6. The accessories are not covered by the terms of the warranty because they are subject to wear.

If you need more information or support, please contact us via: www.arovo.com/contact.

In accordance with our policy of continual product improvement, we reserve the right to make technical and visual changes without notice. The current version of this instruction manual can be found under www.arovo.com/manual

CE DECLARATION OF CONFORMITY

We, Arovo B.V., Dobljn 26, 1046 BN Amsterdam, The Netherlands declare under our own responsibility that the product:

Article number: **ERP929122426 / 92391**
Article name: **MCGREGOR 3-IN-1 FACIAL HAIR TRIMMER**
Barcode: **8720297459177**

- a) The object of the declaration described above is in conformity with the relevant Union harmonisation legislation: **EMC, ROHS.**
- b) Meets the conditions laid down in the following harmonised standards:
EN IEC55014-1:2021, EN IEC55014-2:2021, 2011/65/EU & (EU) 2015/863.

The current version of this Declaration of Conformity can be found under www.arovo.com

van Dijk

Michael van Dijk - Quality manager
April 23, 2024
Amsterdam - The Netherlands

AROVO_{bv}
Dobljn 26
1046 BN Amsterdam
The Netherlands
+31 (0) 85 273 88 86

NO VIKTIGE SIKKERHETSINSTRUKSJONER

Følgende sikkerhetstiltak må alltid følges for å redusere risikoen for elektrisk støt, personskade eller brann. Arovo kan ikke holdes ansvarlig for personskader eller materielle skader forårsaket av manglende overholdelse av sikkerhetsreglene og -forskriftene. Det er viktig å lese alle instruksjonene grundig før du bruker produktet og deretter oppbevare dem for fremtidig referanse eller nye brukere.

FORKLARINGER AV SYMBOLER



Les bruksanvisningen.



Samsvarserklæring. Produkter merket med dette symbolet er i samsvar med alle gjeldende EU-forskrifter i Det europeiske økonomiske samarbeidsområdet. EU-samsvarserklæringen kan fås ved å skrive til produsenten.



Emballasjen kan gjenbrukes eller resirkuleres. Kast eventuelt emballasjemateriale som ikke lenger er nødvendig.



Hvis du oppdager transportskader når du pakker ut produktet, må du kontakte forhandleren uten forsinkelser.

TEKNISKE DATA

- 1x AA batteri (ikke inkludert)
- 1.5V DC

ADVARSLER

- **ADVARSEL:** Ikke bruk hårklyperen i nærheten av badekar, dusjer, bassenger eller andre kar som inneholder vann.
- Hårklyperen kan brukes av barn som er 8 år og eldre, samt av personer med reduserte fysiske, sensoriske eller mentale evner eller som mangler erfaring og kunnskap, hvis er under tilsyn eller har fått instruksjoner i trygg bruk av hårklyperen og forstår farene som bruken medfører. Barn må ikke leke med hårklyperen. Rengjøring og vedlikehold må ikke utføres av barn uten tilsyn.
- Ikke oppbevar og bruk hårklyperen i fuktige områder.
- Oppbevares utilgjengelig for barn.
- Ikke bruk hårklyperen i nærvær av eksplosive og/eller brennbare gasser og/eller væsker.
- Prøv ikke å reparere eller demontere hårklyperen.
- Bruk aldri hårklyperen hvis den ikke fungerer som det skal, eller hvis den har falt i vann.
- Ikke bruk tilbehør som ikke er anbefalt av produsenten.
- Ikke bruk trimmeren til andre formål enn å style menneskehår. Denne trimmeren er designet for å klippe og trimme hår og skjegg. Ikke bruk trimmeren til å klippe kunstig hår.
- Rengjøring og brukervedlikehold må ikke utføres av barn uten tilsyn.
- For barnas sikkerhet må du oppbevare all emballasje (plastposer, bokser, polystyren osv.) utenfor deres rekkevidde.
- Ta vare på disse instruksjonene for fremtidig bruk. Kontakt produsenten for å få instruksjoner i et alternativt format.
- Feil håndtering av batteriene kan føre til eksplosjon eller syreforbrenninger.
- Forsøk aldri å lade opp ikke-oppladbare batterier.
- Unngå kontakt mellom væsken i batteriet med hud, øyne og slimhinner.

- Ved kontakt med batterisyre, skyll umiddelbart områdene med rikelig med rent vann og kontakt lege umiddelbart hvis en uventet reaksjon oppstår.
- IKKE skift ut eller demonter batteriene
- Holdes borte fra barn.
- Ikke bland med nye og brukte batterier, eller forskjellige typer.
- Oppladbare batterier må fjernes fra enheten før de lades.
- Utbrukte batterier skal fjernes fra enheten og kastes på en sikker måte.
- Hvis enheten skal oppbevares ubrukt over lengre tid, bør batteriene tas ut.
- Batteriterminalene må ikke kortsluttes.

RENGJØRING OG VEDLIKEHOLD

- Slå av trimmeren og vent til den er helt avkjølt. Før rengjøring, fjern tilbehøret og det brukte bladet og rengjør ved hjelp av rengjøringsbørsten som var montert i produktet.
- Rengjør trimmeren med en fuktig klut og tørk den deretter.

GENERELLE FUNKSJONER

Les disse instruksjonene grundig før du bruker dette produktet og oppbevar dem på et trygt sted for fremtidig referanse

1. Nesetrimmerhode
2. Presisjonstrimmerhode
3. Trimmerhode til kinnsjegg
4. Rengjøringsbørste
5. Kam
6. Stativ
7. På/Av-bryter
8. Åpning til batteri

TILBEHØR

Nesetrimmerhode, presisjonstrimmerhode, kinnsjeggtrimmerhode, rengjøringsbørste, kam, stativ.

I ESKEN

- Ansiktshårtrimmer
- Brukerhåndbok. Les bruksanvisningen før bruk.

BRUK

Gjør dette før første gangs bruk:

- Fjern emballasjen og inspiser hårklipperen for skade.
- Bruk aldri enheten hvis den er skadet på noen måte.
- Returner det til selgeren umiddelbart.
- Fjern lokket. (Bilde 1)
- Installere batteri: Grip den øvre delen av enheten med den ene hånden, den nederste halvdel med den andre og trekk fra hverandre. (Bilde 2)
- Skyv/klikk enhetens bunndeksel tilbake på plass. (Bilde 3)




BEREGNET BRUK


- Advarsel! Bruk enheten kun utvendig.
- Enheten er kun beregnet på menneskehår.
- All feil bruk kan være farlig!
- For å fjerne et tilbehør, hold trimmeren med én hånd og dreier tilbehøret tilbehøret med den andre hånden. Du kan enkelt sette på et annet tilbehør.
- Håret må være rent og tørt når det kuttes.
- Kutt kun små mengder om gangen.
- La enheten gå en kort stund før du begynner å kutte.

INSTALLERE/BYTT BATTERI


- Fjern lokket. (Bilde 1)
- Grip den øvre delen av enheten med den ene hånden, den nederste halvdelen med den andre og trekk fra hverandre (Bilde 2) for å komme til batterirommet..
- Plasser 1 AA-batteri i rommet, og pass på at den positive polen (+) vender mot bunnen av enheten.
- Skyv enhetens bunndeksel tilbake på plass. (Bilde 3)

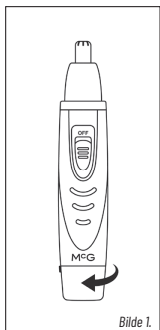

Bilde 1.

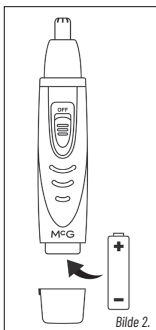

Bilde 2.

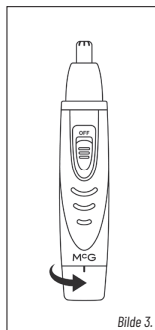

Bilde 3.

BRUK AV ENHETEN

- Fest tilbehøret som skal brukes i trimmeren.
- Velg tilbehør avhengig av dine behov.
- Fest tilbehøret til hårtrimmeren.
- Slå på enheten. For å slå på hårklipperen. Hold enheten i håndflaten med en vinkel vinkelrett på hudplanet (90°). Det er ikke nødvendig å legge mye press på enheten.
- Bare la enheten berøre overflaten av huden din forsiktig.
- Flytt enheten nærmere området som skal trimmes og flytt trimmeren forsiktig opp og ned for å trimme hårene.

RIKTIG AVFALLSBEHANDLING AV DETTE PRODUKTET.



Denne merkingen indikerer at dette produktet ikke skal kastes sammen med annet husholdningsavfall i hele EU. For å unngå mulig miljøskade eller skade på menneskers helse som skyldes ukontrollert avfallsavfallsbehandling, må produktet resirkuleres på en måte som legger til rette for bærekraftig gjenbruk av materialressurser. Vennligst bruk de miljøstasjonene eller returpunktene som er tilgjengelig der du bor, eller kontakt forhandleren der produktet ble kjøpt. Forhandleren kan ta i mot dette produktet og sørge for miljøvennlig resirkulering.



Ta ut batteriet før du kaster hårklipperen. Ikke kast gamle batterier sammen med husholdningsavfallet, men på en batteriinnsamlingsstasjon på en gjenvinningsplass eller i en butikk. Ta kontakt med kommunen eller forhandleren din for informasjon om avfallsbehandling.

GARANTI

Produsenten gir garanti i henhold til lovgivningen i kundens eget bostedsland, med minimum 36 måneder, fra datoen da apparatet ble solgt til sluttbrukeren.

- Garantien dekker kun feil i materialer eller arbeidsutførelse.
- Reparasjonene under garantien kan kun utføres av et autorisert servicesenter. Ved fremsettelse av krav iht garantien må den originale kjøpskvitteringen (med kjøpsdato) sendes inn.
- Garantien gjelder ikke i tilfelle:

1. Normal slitasje
2. Feil bruk, for eksempel overbelastning av hårklipperen, bruk av ikke-godkjent tilbehør
3. Bruk av makt, skade forårsaket av ytre påvirkninger
4. Skader forårsaket av manglende overholdelse av bruksanvisningen, for eksempel tilkobling til en uegnet strømforsyning eller manglende overholdelse av installasjonsinstruksjonene
5. Delvis eller helt demonterte apparater
6. Tilbehør dekkes ikke av garantien fordi det er utsatt for slitasje.

Hvis du trenger mer informasjon eller støtte, kan du kontakte oss via: www.arovo.com/contact.

I samsvar med vår policy om kontinuerlig produktforbedring forbeholder vi oss retten til å foreta tekniske og visuelle endringer uten varsel. Den gjeldende versjonen av denne bruksanvisningen finner du under www.arovo.com/manual.

EU-SAMSVARSEKLÆRING

Vi, Arovo B.V., Doblijn 26, 1046 BN Amsterdam, The Netherlands erklærer på eget ansvar at produktet:

Artikkelnummer: **ERP929122426 / 92391**
Artikkelnavn: **MCGREGOR 3-IN-1 FACIAL HAIR TRIMMER**
Strekkode: **8720297459177**

a) Gjenstanden for erklæringen beskrevet ovenfor er i samsvar med relevant harmoniseringslovgivning i EU:
EMC, ROHS.

b) Oppfyller vilkårene fastsatt i følgende harmoniserte standarder:
EN IEC55014-1:2021, EN IEC55014-2:2021, 2011/65/EU & (EU) 2015/863.

Den gjeldende versjonen av denne samsvarserklæringen finner du på www.arovo.com

van Dijk

Michael van Dijk - Kvalitets ansvarlig
23 april 2024
Amsterdam - Nederland

AROVO_{bv}
Doblijn 26
1046 BN Amsterdam
The Netherlands
+31 (0) 85 273 88 86

MCGREGOR 3-IN-1 FACIAL HAIR TRIMMER

Article nr.: ERP929122426 / 92391

Batch nr.: 2024-10342

Made in China

Imported by Europris AS

Dikeveien 57, 1661 Rolvsøy, Norway

Manufactured by Arovo B.V.

Doblijn 26, 1046 BN Amsterdam

The Netherlands, www.arovo.com

